

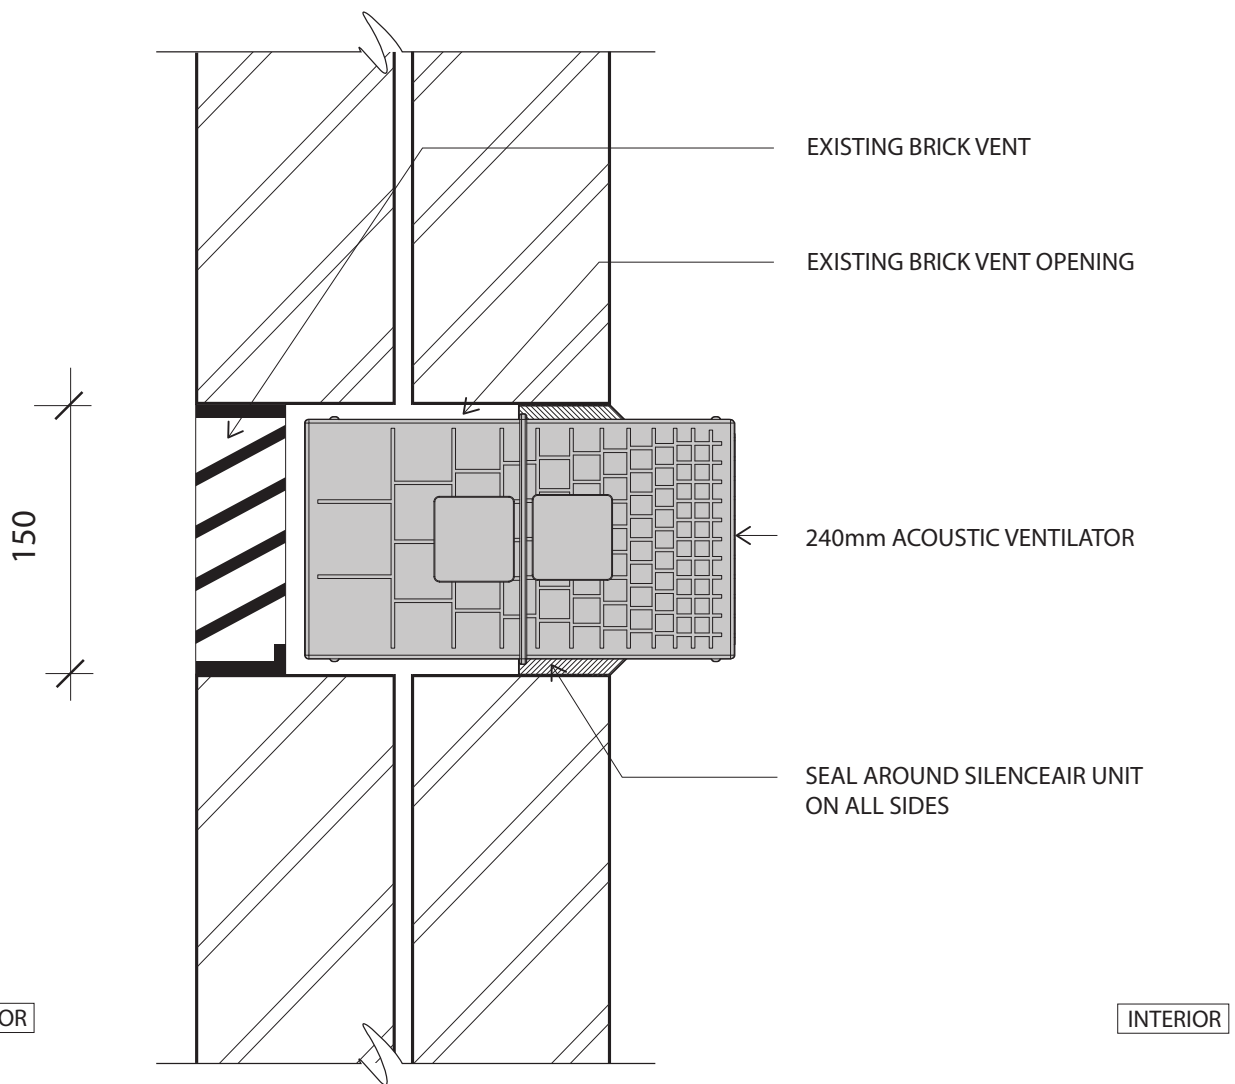



**240mm Acoustic Wall Ventilator  
 Retrofitting into an Existing Brick vent for Sub-Floor ventilation**

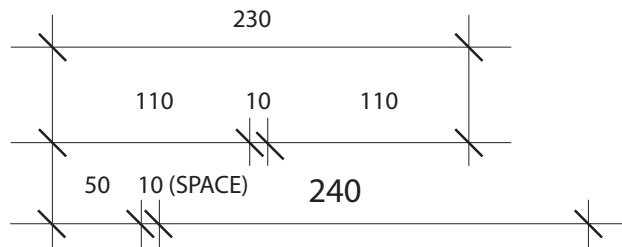

1

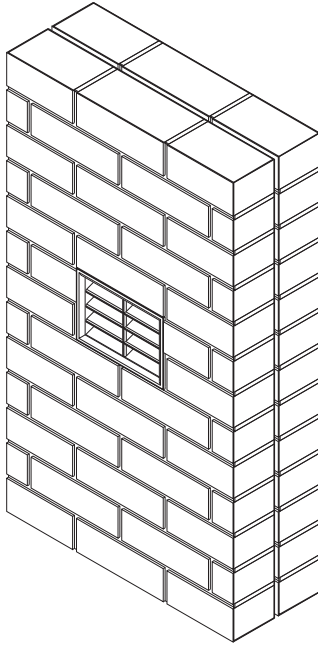


2

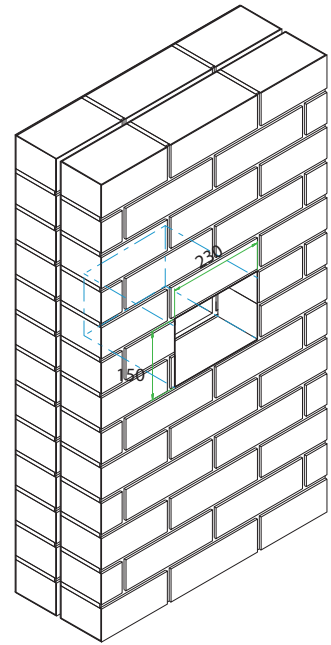

- From the outside, inspect the sub-floor vent opening and ensure there is a clear passage through the brickwork behind the existing brick vent.


- WHEN YOU HAVE SUB-FLOOR ACCESS :-
- From the inside, check there is a clear opening of at least 1 brick long by 2 bricks high.

3

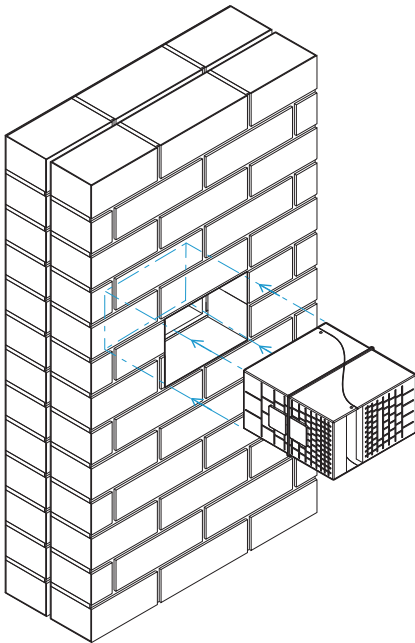


- Insert the Silenceair acoustic vent into location. Ensure it is in the correct orientation. Push into the opening as far as possible.

4

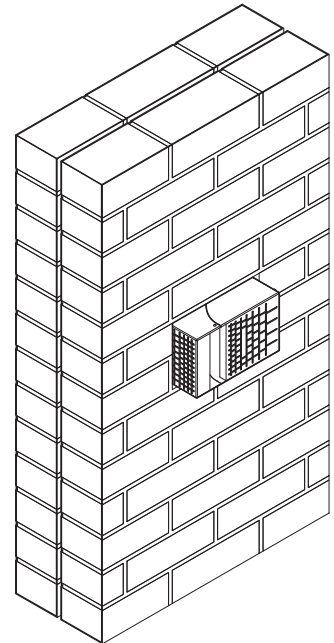


- Seal around the edges to ensure sound does not leak past the Silenceair unit.
- The installation is now complete.

5

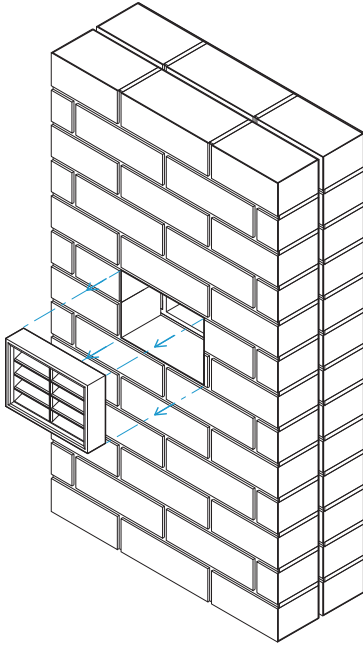


- WHEN YOU DO NOT HAVE SUB-FLOOR ACCESS :-
- From the outside, remove the existing brick vent.
- Ensure the air passage is clear of debris.

6

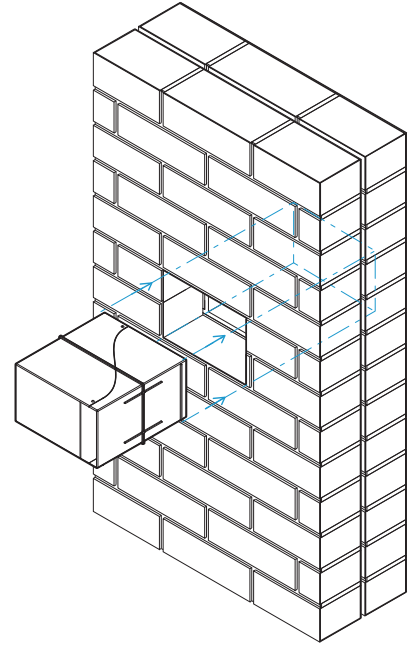


- Insert the Silenceair unit into the air passage far enough to allow for the repositioning of the brick vent.
- Seal around all sides to ensure noise does not leak around the Silenceair unit.

7

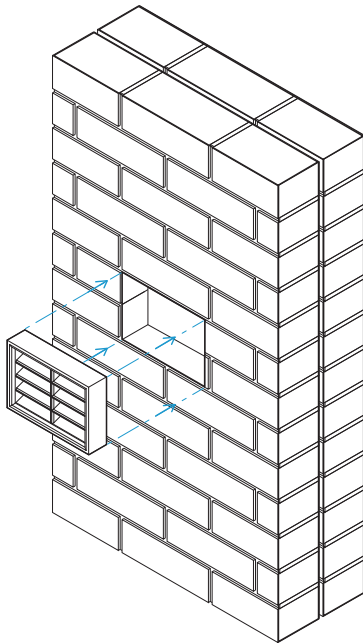

- Re-insert the brick vent and make good.

8

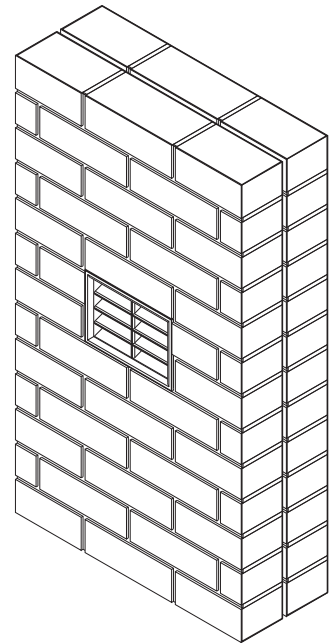

- Installation is now complete.
- The Silenceair unit is completely hidden in the wall.

## NOTES

- Silenceair reserves the right to modify or reissue technical brochures without notice.
- © 2018 Silenceair International Pty Ltd. ABN 44 096 462 949

Date of Publication: October 2018.