




**90mm Premium Acoustic Wall Ventilator  
 Installed in 225mm Brick Veneer Wall**

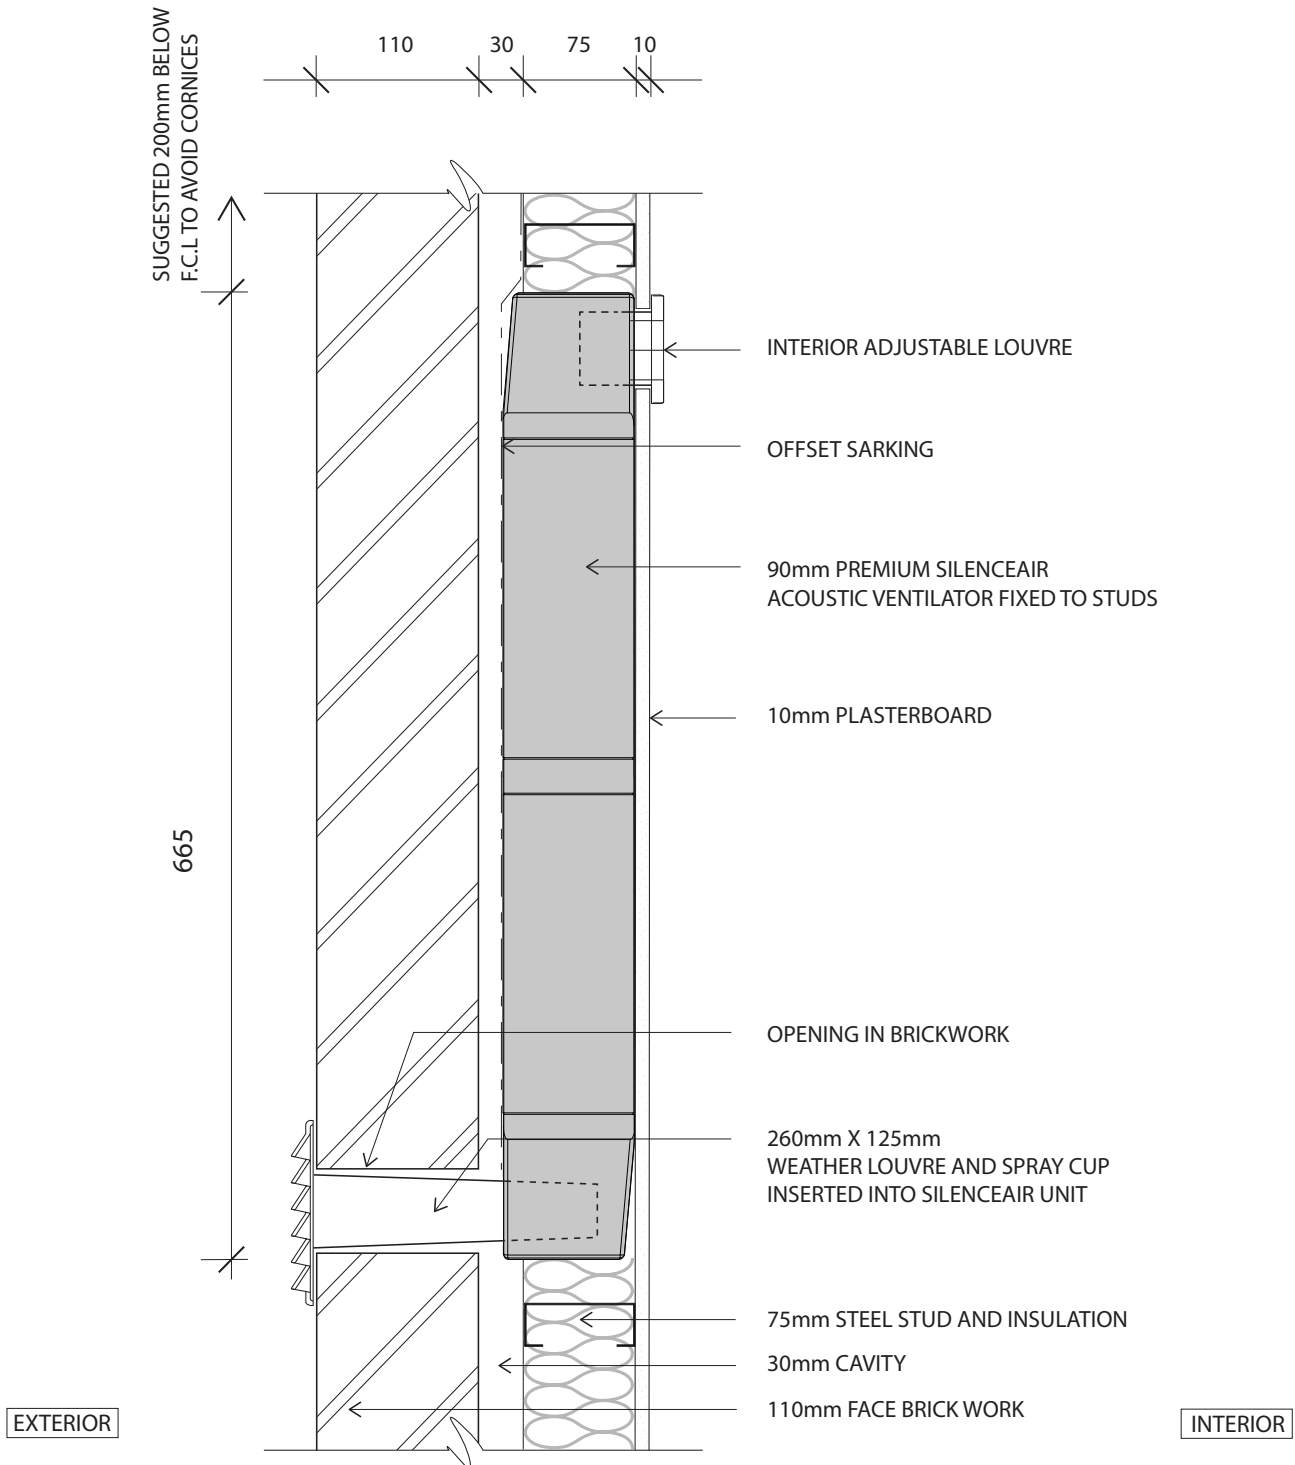

1

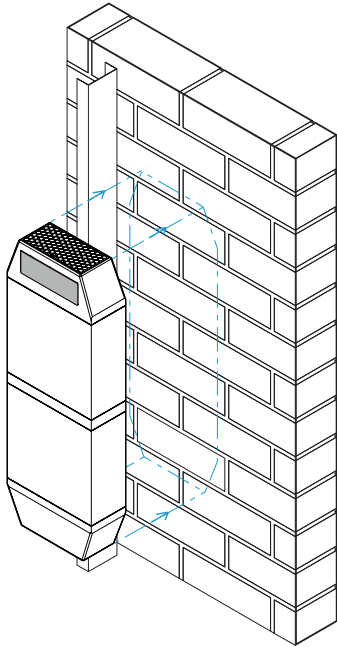


2

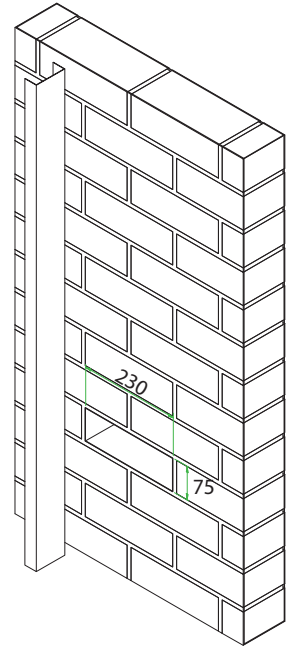


- Locate the Silenceair module on the wall.
- Mark the location of the air inlet opening on the wall with a small pilot hole.
- Ensure the air inlet is in the desired location on the exterior panel.

- Offset the sarking and remove one brick to allow the air inlet weather louvre to be installed.

3

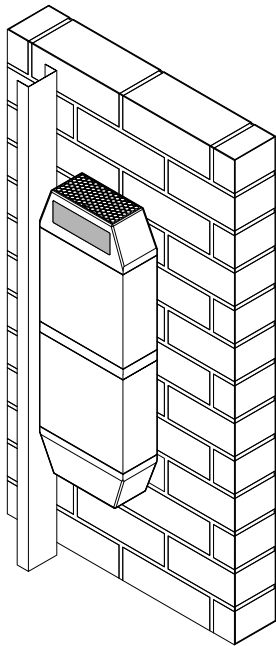


4

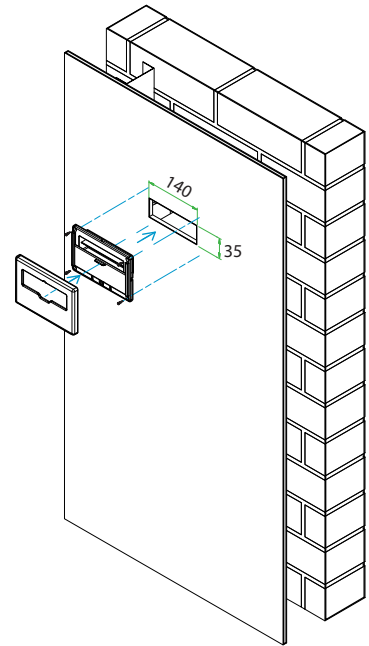

- Fix the Silenceair into position.
- Ensure correct alignment with the air inlet.
- It can be glued or screwed into position to the studs or the top hats.
- Seal around the edges of the Silenceair and the wall sheeting to ensure no sound can leak out around the unit.


- Once the interior plaster board lining is installed and painted the interior air out register can be fitted.

5

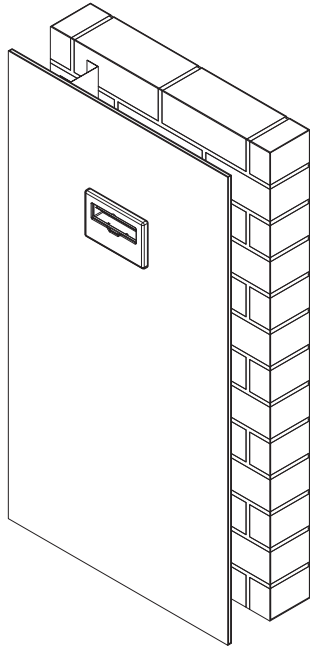


- From the inside, the Silenceair module is completely hidden in the wall cavity.

6

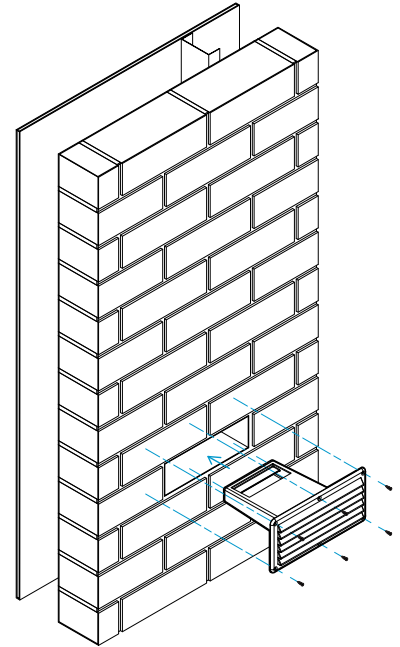

- Once the exterior brickwork is cleaned, install the colour coordinated exterior weather grille.
- Ensure the grille is installed the right way up.

7

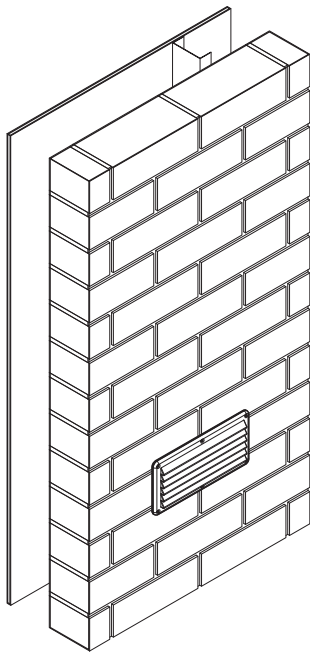

- From the outside, the Silenceair module is completely hidden in the wall.
- All that is visible is the colour coordinated weather louvre.

## NOTES

- Silenceair reserves the right to modify or reissue technical brochures without notice.
- © 2019 Silenceair International Pty Ltd. ABN 44 096 462 949
- Date of Publication: August 2019.